


• Installation

Follow the four steps below for connection to your single or two-line telephones.

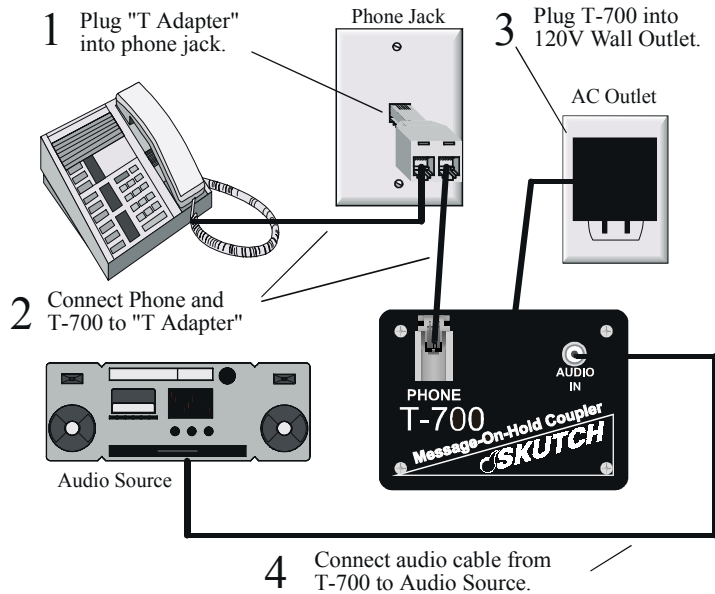

• Operation

• To place a call on hold

Do **NOT** press the hold button!!...simply press and hang up the phone. The caller will hear the audio source that you have connected to the adapter. Note: if you do not hang up your phone within 4 seconds, the adapter will automatically reset.

• To release the hold condition

Pick up any phone that is connected to that line and the adapter will automatically release the call.

• Troubleshooting Guide

Open the lid by removing the 4 Phillips head screws; you will see the circuit board to the right.

• Lights on phone don't work when on hold

Change the "LIGHT SWITCH" to a different position. Try all three positions if necessary. (see below)

• No Audio

Open lid. Pick up phone and press the key. The red LED for the line you are on, in the T-700, (see below) should light for about 4 seconds. Audio should be heard through the ear piece of the telephone. If no audio is heard check the following:


- Make sure the audio source is playing.
- Make sure the volume on the audio source is turned up.
- Make sure that the audio cable is connected from the headphone output of the audio source, to the audio jack on the T-700. Make sure the type of jacks on the cable are the correct type. (male phono or RCA for the T-700).

• Music does not shut off when phone picked up

Open lid. Change the "LIGHT SWITCH" to a different position. Try all three positions if necessary.

• Music cuts off after placing call on hold

Hang the phone up after pressing the key, do not press the hold button on your telephone.

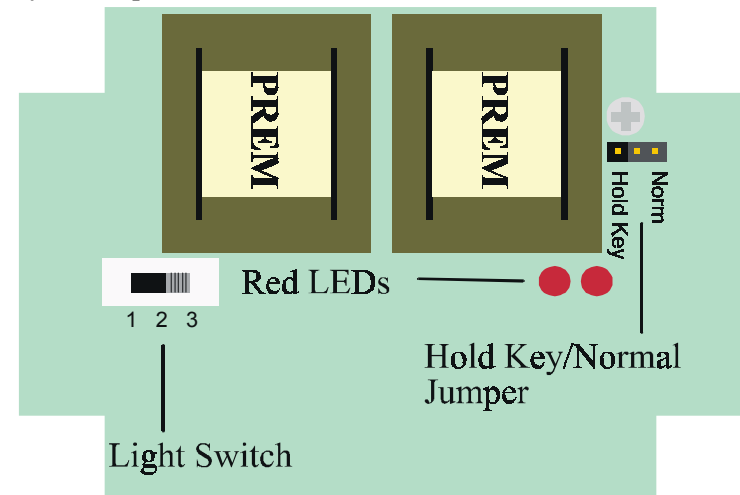

Tech Support - 916-786-6186

If you have any problems getting the T-700 to work properly feel free to give us a call. Technical Support is available between the hours of 7:30 AM and 4:30 PM Pacific Time, Monday through Friday.

ONE YEAR LIMITED WARRANTY

This SKUTCH PRODUCT is warranted against defects for a period of one (1) year from the date of the original invoice. Within this period, we will repair it without charge for parts and labor. To obtain warranty service the product must be returned, at the customer's expense, to SKUTCH Electronics along with a copy of the original invoice. After the unit has been repaired, SKUTCH will ship the PRODUCT back via UPS GROUND service at our expense. If any other form of return shipment is requested, the customer will pay for 100% of the shipping cost.

This Warranty does not apply if in the sole opinion of SKUTCH Electronics, the PRODUCT has been damaged by lightning or any other Acts of God, or by accident, misuse, neglect, or improper packing, shipping, modification or servicing by other than an authorized SKUTCH Service Center.

EXCEPT AS SPECIFICALLY PROVIDED IN THIS AGREEMENT, THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND IN NO EVENT SHALL SKUTCH ELECTRONICS BE LIABLE FOR LOSS OF PROFITS OR BENEFITS, INDIRECT, SPECIAL, CONSEQUENTIAL OR OTHER SIMILAR DAMAGES ARISING OUT OF ANY BREACH OF THIS WARRANTY OR OTHERWISE.

Command Codes

1 = Star to activate (*)

2 = Pound to activate

3 = Short Touch Tone

4 = Long Tone Detect (*)

6 = Hold Key Mode

7 = Reset to Defaults (*)



"Telecommunication Products to solve Telecommunication Problems"



T-700



"Touch Tone" 2 Line Promotion On Hold Adapter

S/N A104001 and Above

Version 5.1