



"Telecommunication Products to solve Telecommunication Problems"

CK-1A4 Promotion-On-Hold Module

For the AT&T 1040, 1070, and 1080 series of Phones

V3 2/4/09



Introduction

Thank you for purchasing the Skutch CK-1A4 Promotion-On-Hold Module for the AT&T 1040, 1070, and 1080 four line phone system. This unit ONLY works with these 3 phone models. The CK-1A4 is a true plug and play device. The unit does not require any "Learning" to operate. When a call is placed ON HOLD from any of the phones, the ON HOLD caller will hear the Promotion-On-Hold audio. When the line is re-answered, the audio automatically stops. It's that simple!




Installation

The SENSOR Board MUST be stuck to the phone or this unit will not function.
1- Make sure that the surface on the telephone is clean and free of dust and/or oil.
2- Peel the paper protector off back side of the "SENSOR BOARD" . Carefully align as shown in Fig. 2. Note that the top and left, edges of the SENSOR Board align with the bottom and left, edges of the display on the phone. Also note that the "white dashes" on the SENSOR board should be vertically centered over the LINE 1-4 LEDs on the phone. Once you are SURE it is aligned correctly, press down firmly to adhere to phone.


CAUTION: The SENSOR BOARD must be aligned correctly or the unit will not operate properly. If you need to remove the SENSOR BOARD once it is attached, slowly lift up on one edge of the SENSOR BOARD. Pulling the SENSOR BOARD off fast could damage the foam pad.

Fig 2

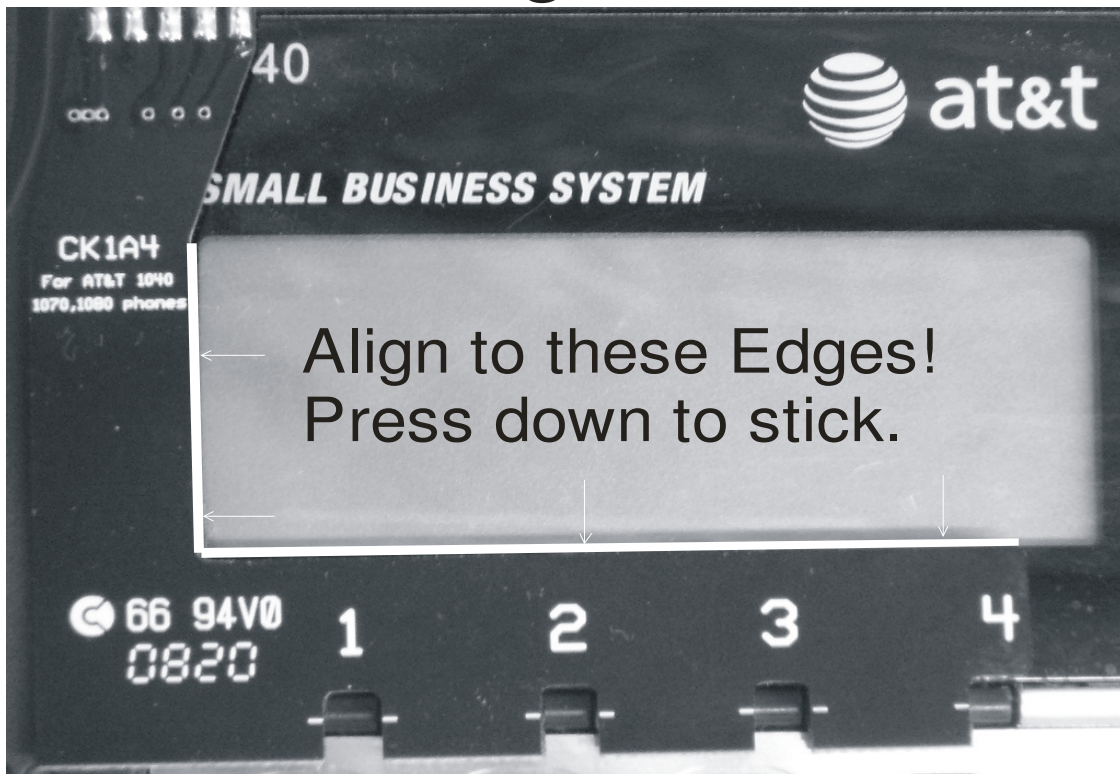

Sensor Board goes over
the lights on phone.

3- Position the CK-1A4 box under the base telephone with the jacks facing towards the back of the phone. (See Fig. 3).

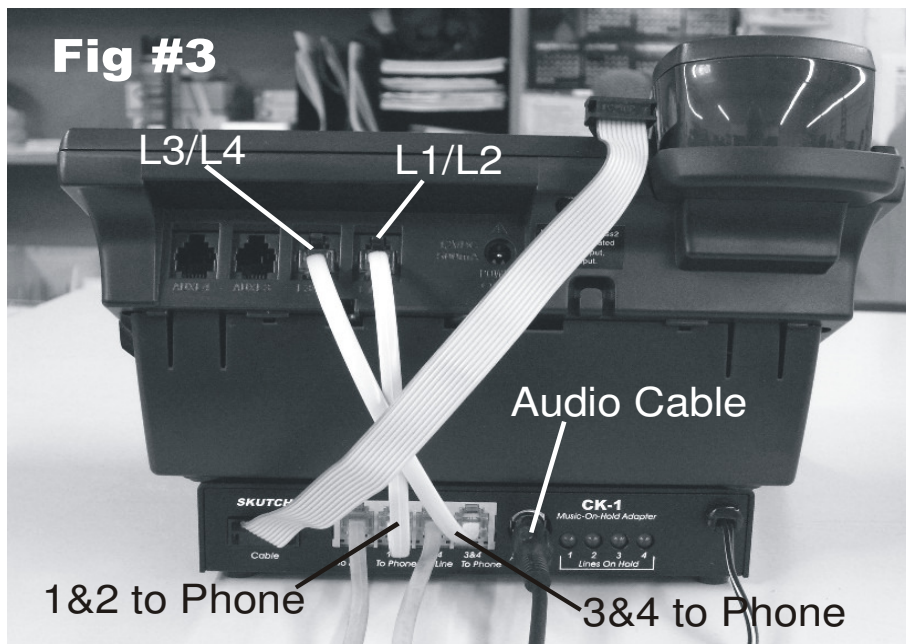

- 4- Connect the short modular cord from [1&2 to Phone] on the CK-1 to the [L1/L2] jack on the Phone.
- 5- Connect the short modular cord from [3&4 to Phone] on the CK-1 to [L3/L4] jack on the Phone.
- 6- The audio cord that comes with the CK-1A4 is ONLY used for CD Players. If you have a digital player, then you should be using the audio cord that came with your digital unit. Connect the proper audio cord from your music source, to the AUDIO IN jack on the back of the CK-1 box.
- 7- Connect a MOD cord from Telephone Wall Jack 1&2 to [1&2 to Line] on CK-1.
- 8- Connect a MOD cord from Telephone Wall Jack 3&4 to [3&4 to Line] on CK-1.
- 9- Connect the POWER CUBE from the CK-1 box to 115VAC power.

Testing the System:

- 1- Pickup line 1 on your telephone. Press the HOLD button. From the rear of the phone, the line one LED on the BLACK BOX (CK1) should light up steady. Pick up the phone and release the line.
- 2- Repeat this test for lines 2-4. If all lines light up when placed ON HOLD, the CK-1 is working properly. If any of the LEDS on the black box do not operate properly, then

- a) Make sure that the CK-1A4 and Phone is connected to power.
- b) Make sure that the SENSOR BOARD is aligned properly.

I hear Music when I pick up the phone

It is normal to hear a burst of music when a call is picked up from a HOLD condition. The maximum length of the burst should be under 1 second. This is normal and is due to the communication structure of this family of phones.

Lights on CK-1 Box.

When you place a line on HOLD, the corresponding LED on the rear of the CK-1A4 box lights up to confirm the Promotion-On-Hold condition.

Using Other Phones with the 1040, 1070, and 1080 Phones

These AT&T phones are "Non-Friendly" to foreign phones and should NOT be used with any other model of phone, including other AT&T models. If you place a 1040 on hold, the hold condition can not be cleared by any other model of phone. The CK-1A4 will ONLY provide Promotion-On-Hold audio when a call is placed ON HOLD from ONLY the AT&T 1040, 1070, or 1080 phones.

Tech Support - 916-786-6186

If you have any problems getting the unit to work properly feel free to give us a call. Technical Support is available between the hours of 7:30 AM and 4:30 PM Pacific Time, Monday through Friday.

• ONE YEAR LIMITED WARRANTY

This SKUTCH PRODUCT is warranted against defects for a period of one (1) year from the date of the original invoice. Within this period, we will repair it without charge for parts and labor. To obtain warranty service the product must be returned, at the customer's expense, to SKUTCH Electronics along with a copy of the original invoice. After the unit has been repaired, SKUTCH will ship the PRODUCT back via UPS GROUND service at our expense. If any other form of return shipment is requested, the customer will pay for 100% of the shipping cost.

This Warranty does not apply if in the sole opinion of SKUTCH Electronics, the PRODUCT has been damaged by lightning or any other Acts of God, or by accident, misuse, neglect, or improper packing, shipping, modification or servicing by other than an authorized SKUTCH Service Center.

EXCEPT AS SPECIFICALLY PROVIDED IN THIS AGREEMENT, THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND IN NO EVENT SHALL SKUTCH ELECTRONICS BE LIABLE FOR LOSS OF PROFITS OR BENEFITS, INDIRECT, SPECIAL, CONSEQUENTIAL OR OTHER SIMILAR DAMAGES ARISING OUT OF ANY BREACH OF THIS WARRANTY OR OTHERWISE.